


Mardome Contents


Please unpack and check that all correct parts are included and undamaged.

All **Mardome Trade**

All **Mardome Ultra**

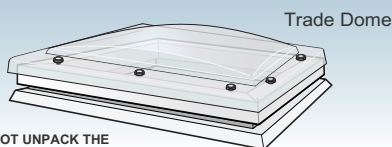


OR

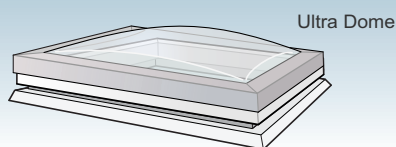


**DO NOT UNPACK THE
ROOFLIGHT UNTIL IT
IS READY TO BE INSTALLED**

With either assembly, you will receive:
Kerb Fixings



With either assembly, you will receive:
Mardome Opening Unit Extras

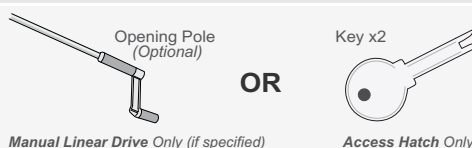

Manual Linear Drive Only (if specified)

Access Hatch Only

Fixing Quantities

Length of Nominal Dome Side (mm)	Number of fixings per side
600, 750	2
900, 1050, 1200	3
1350, 1500, 1650	4
1800, 1950	5
2100, 2250	6
2400	7


(All fixings supplied in packs of 5.)

Mardome Opening Unit - Pre-Installation Information


Please select the relevant detail below for your product:

Manual Opening dome on to existing upstand

N.B. Kerb must be installed with hinges facing up-slope.

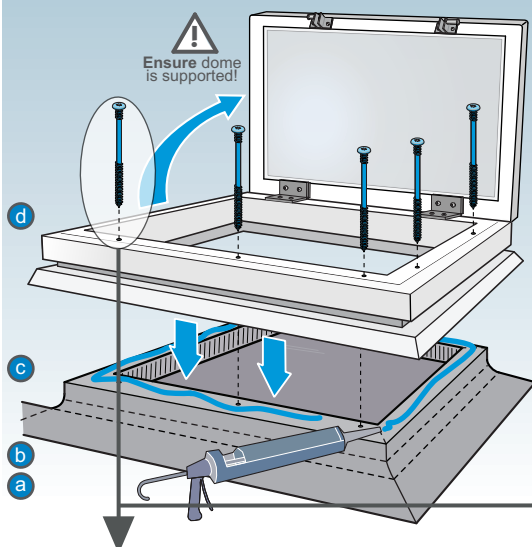


Access Hatch on to existing upstand

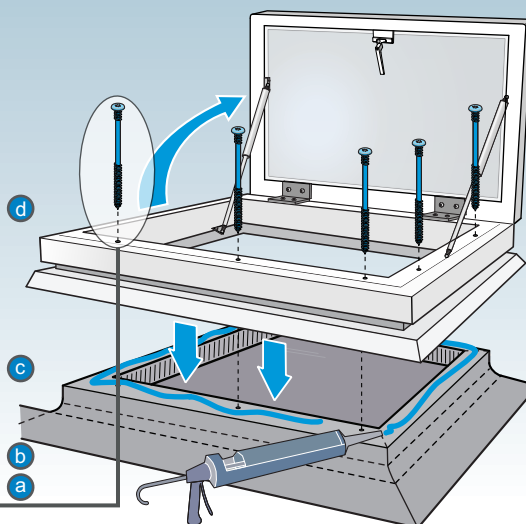

Installation Instructions

- Ensure** dome is supported in open position to avoid damage!
- a** Install roof covering to cover existing upstand in accordance with manufacturer's installation recommendations.
- N.B.** It is important that there should be no excessive build up of layers, the top surface should be level and free from any protrusions or projections which may prevent adequate weather proofing.
- b** Carefully remove roof light from its packaging and ensure that hinged frame is unlocked and can be opened to 90°.
- c** Mastic/Silicone around the edge of the upstand opening and correctly place kerb, ensuring it is located squarely to the upstand with hinges facing up-slope.
- d** Fix kerb to the builders upstand using the 125mm kerb fastener.
- e** Ensure that the hinged dome is connected to the frame and locked into the closed position


Kerb Fixing

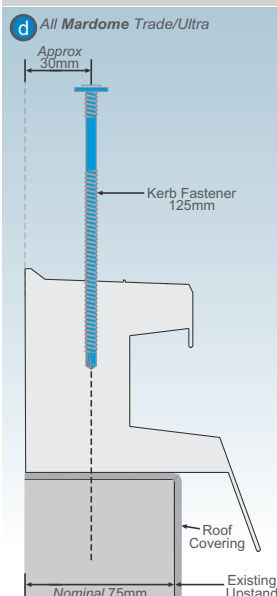


Mardome Installation

Please note that all Health and Safety Regulations must be followed on site throughout the installation process.

b e For Manual Linear Drive Connection

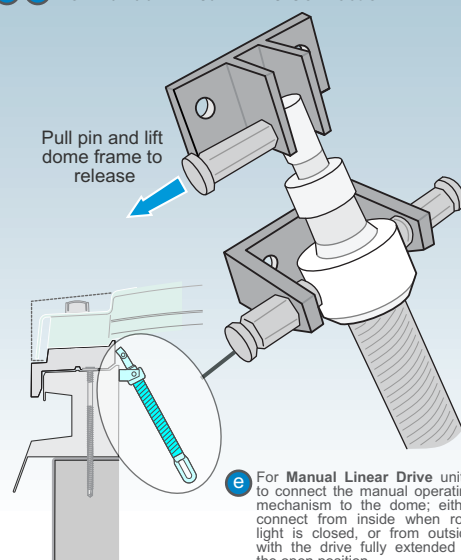

e For Access Hatch locking/unlocking

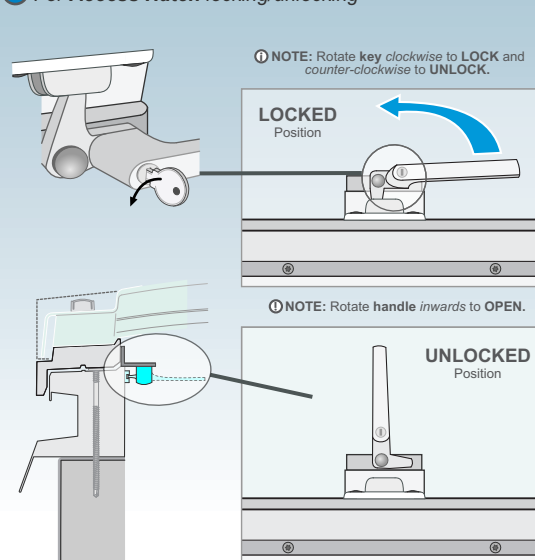

TECHNICAL SUPPORT: For any technical information/queries please contact your supplier.


Brett Martin Daylight Systems operates a policy of continuous product improvement, and reserves the right to alter specifications at any time without notice. Every effort has been taken to ensure all details contained in this document are correct at the time of going to press but this document should be used only as a guide and does not in any way form part of a contract or warranty. It is the customer's responsibility to ensure that the product is suitable for the actual conditions of use, which are beyond the control of Brett Martin Daylight Systems.

Mardome Contents

Please unpack and check that all correct parts are included and undamaged.

All **Mardome Trade**


Trade Dome

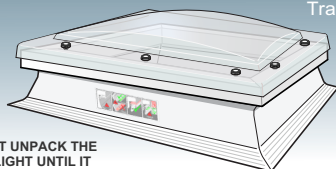

OR

All **Mardome Ultra**

Ultra Dome

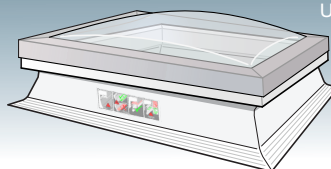


**DO NOT UNPACK THE
ROOFLIGHT UNTIL IT
IS READY TO BE INSTALLED**

With either assembly, you will receive:

Kerb Fixings


Kerb Fastener



55mm

With either assembly, you will receive:

Mardome Opening Unit Extras

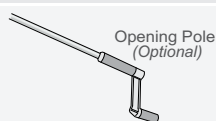

Opening Pole
(Optional)

OR

Key x2



Manual Linear Drive Only (if specified)

Access Hatch Only

Fixing Quantities

Length of Nominal Dome Side (mm)	Number of fixings per side
600, 750	2
900, 1050, 1200	3
1350, 1500, 1650	4
1800, 1950	5
2100, 2250	6
2400	7


(All fixings supplied in packs of 5.)

Mardome Installation


Please note that all Health and Safety Regulations must be followed on site throughout the installation process.

Manual Opening dome on to sloping or 300mm kerb

N.B. Kerb must be installed with hinges facing up-slope.

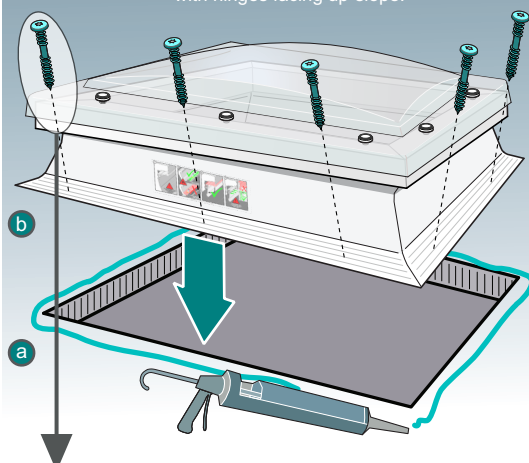


c Roof Covering Installation

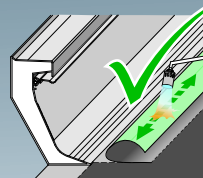

If required, lightly torch roof covering.




WARNING:
Never apply direct heat or naked flame to the roof light!

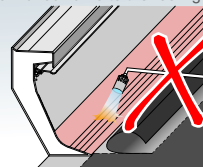

d IMPORTANT:
Roof Covering Clamp Locking



Push along line as shown to lock.
DO NOT push on soft area!

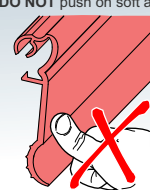

Installation Instructions


- Mastic/Silicone around the edge of the roof opening and correctly position dome, ensuring it is located squarely over the roof opening with hinges facing up-slope.
- Fix dome to the roof using the 55mm kerb fastener.

See above **Fixing Quantities** table for the correct quantity of fastenings required for the size of the dome.


N.B. Length of side refers to the nominal dome size (equivalent to inside base of kerb foot).
- Install roof covering up to lip, to stop under roof covering clamp, ensuring it **does not** foul clamp. Install in accordance with manufacturer's installation recommendations.
- Lock the roof covering clamp down fully, as shown.
- See e (below) for further information on opening mechanisms

Kerb Fixing

- b c All Mardome Trade & Ultra**
- Kerb
 - Roof Covering
 - Structural Member
 - Insulation

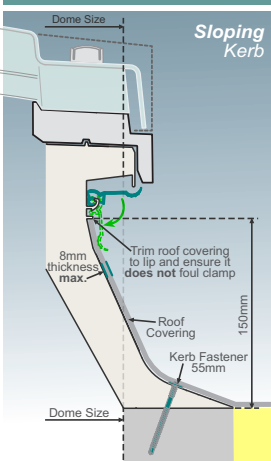

Sloping Kerb

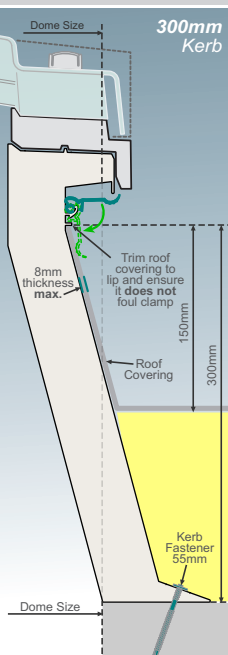


300mm Kerb

Mardome Opening Unit - Further Information

Please select the relevant detail below for your product:


e For Manual Linear Drive Connection

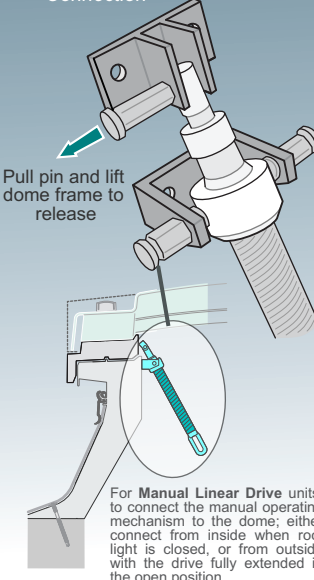

Pull pin and lift dome frame to release

For **Manual Linear Drive** units, to connect the manual operating mechanism to the dome; either connect from inside when roof light is closed, or from outside with the drive fully extended in the open position.

e For Access Hatch locking/unlocking

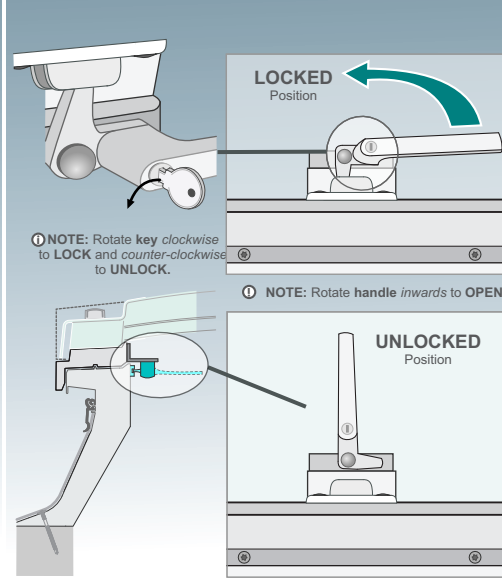

LOCKED
Position

NOTE: Rotate key clockwise to **LOCK** and counter-clockwise to **UNLOCK**.

NOTE: Rotate handle inwards to **OPEN**.

UNLOCKED
Position

TECHNICAL SUPPORT: For any technical information/queries please contact your supplier.

Brett Martin Daylight Systems operates a policy of continuous product improvement, and reserves the right to alter specifications at any time without notice. Every effort has been taken to ensure all details contained in this document are correct at the time of going to press but this document should be used only as a guide and does not in any way form part of a contract or warranty. It is the customer's responsibility to ensure that the product is suitable for the actual conditions of use, which are beyond the control of Brett Martin Daylight Systems.